

Compatible for	Printer Models ( for use on)	Color
<b>HEWLETT PACKARD CARTRIDGES</b>		
<b>HP51626A</b>	<u>Deskjet Plus</u> , 400, 400L 420,420C, 500 / C / J, 505 / C / K / J, 510, 520 /540/ 550/ 560C; <u>Deskwriter Plus</u> , C,520, 540, 550, 560C; <u>DesignJet 200</u> , 220, 600; <u>OfficeJet LX</u> , 300, 330, 350 <u>Fax 200</u> , 300/700 Series, 800,900,950; <u>Printer/Scanner/Copier 370</u> , 380; <u>Apollo P-1200/1220/1225i</u> ; <u>Panasonic Fax UG300/321</u> , UF332A	BLACK
<b>HP51625A</b>	<u>Deskjet 200Cci</u> , 310,311,320,340, 400,420C, 500/C, 505/J, 525, 540, 550/C, 560/C/J; <u>Deskwriter C</u> , CK, 310, 320, 540, 550/C, 560/C; <u>Apollo P-1200/1220</u> , P-1250i	COLOR
<b>HP51629A</b>	<u>DeskJet 600/C</u> , 660C/Cse, 670C/TV, 672/ 680/ 682/ 690/ 691/ 692/ 693/ 694/ 695/ 697/C ; <u>Desk Writer</u> :600, 660, .680, 694C; <u>Office Jet 500</u> , 520, 570, 580, 590, 600,610, 630, 635,700, 710,720.; <u>Printer/Scanner/Copier 370</u> , 380; <u>Fax</u> : 910, 920	BLACK
<b>HP51649A</b>	<u>DeskJet 350cbi</u> ,600, 610C, 630C,640C,660C,670C, 690C, 692C, 694C, 695Cci; <u>Desk Writer</u> 600, 660C,680,694C; <u>OfficeJet 500</u> , 520, 570, 580, 590, 600, 610, 635,710,725. <u>Apollo P-2100U</u> ,2200,P2250	COLOR
<b>HPC6614D</b>	<u>DeskJet 610C</u> , 612C, 630C, 635C, 640C; <u>Apollo* P-2100U / 2150U / 2200 / 2250</u>	BLACK
<b>HP51645A</b>	<u>DeskJet 710C/ 720C/ 815C/ 820Cxi/ 830C/ 850C/ 870Cxi,880C/ 890C/ 895Cxi/930C/ 950C/ 955C</u> , 960C/970Cxi, 990Cxi/1000Cxi/1120C/1220C/ps/1600C/cm; <u>Designjet 700</u> , 750c,750c plus,755cm; <u>Color copier 170</u> , 290; <u>Officejet g55</u> , g85, g95, k60, k80, r45, r65, t45, t65; <u>Officejet pro1150c</u> ,1170c,1175c; <u>Photosmart p1000</u> , p1100,p1215, p1218	BLACK
<b>HPC6615N</b>	<u>DeskJet 810C</u> , 840C, 845C, 920C, 845C, 3820; <u>Psc 500</u> , 750 950	BLACK
<b>HPC1823D</b>	<u>DeskJet 710C/ 712/ 720C/ 722C/ 810C/812C/ 830C/ 832C/880C/ 890C/ 895Cxi/ 1120C / Cse / Cxi / 1125C</u> <u>Officejet R45</u> , R65, T45,T65, 1170 1175C; <u>Psc 500</u>	COLOR
<b>HPC66578D</b>	<u>DeskJet 920C/ 930C/930photo/ 948C/ 950C/960C/ 970Cxi/990Cxi/1120C/1220C/ps/1600C/cm</u> ; <u>Color copier 290</u> ; <u>Officejet g55,g85,g95,k60,k80,v40</u> ; <u>Photosmart p1000,p1100,p1215,p1218</u> ; <u>Psc 750 950</u>	COLOR
<b>HPC6625A</b>	<u>DeskJet 840C</u> , 845C	COLOR
<b>HPC6627A</b>	<u>DeskJet 3420</u> , 332X, 3320	BLACK
<b>HPC6628A</b>	<u>DeskJet 3420</u> , 332X, 3320	COLOR
<b>HPC6656A</b>	<u>DeskJet 450</u> , 5160, 5550, 5652, <u>OfficeJet 4110</u> , 6110, <u>Photosmart 130</u> , 7150, 7550,	BLACK
<b>HPC6657A</b>	<u>psc1110</u> ,1210, 2110, 2210	COLOR
<b>BROTHER CARTRIDGES</b>		
<b>LC02BK</b>	Brother MFC-7100 / 7150C / 7160C / 9100C	BLACK
<b>LC02C</b>	Brother MFC-7100 / 7150C / 7160C / 9100C	C
<b>LC02M</b>	Brother MFC-7100 / 7150C / 7160C / 9100C	M
<b>LC02Y</b>	Brother MFC-7100 / 7150C / 7160C / 9100C	Y
<b>LC04BK</b>	Brother MFC-7300 / 7400C / 9200C	BLACK
<b>LC04C</b>	Brother MFC-7300 / 7400C / 9200C	C
<b>LC04M</b>	Brother MFC-7300 / 7400C / 9200C	M
<b>LC04Y</b>	Brother MFC-7300 / 7400C / 9200C	Y
<b>LC21BK</b>	Brother MFC-3100C/MFC5100C Fax:1800C	BLACK
<b>LC21C</b>	Brother MFC-3100C/MFC5100C Fax:1800C	C
<b>LC21M</b>	Brother MFC-3100C/MFC5100C Fax:1800C	M
<b>LC21Y</b>	Brother MFC-3100C/MFC5100C Fax:1800C	Y
<b>XEROX CARTRIDGES</b>		
<b>H100BK</b>	XROX M750 / M760	BLACK
<b>Y101C</b>	XROX M750 / M760	C
<b>Y101M</b>	XROX M750 / M760	M
<b>Y101Y</b>	XROX M750 / M760	Y
<b>SHARP CARTRIDGES</b>		
<b>AJ-20B</b>	AJ-1800 series, AJ-2000 series, AJ-6000 series	BLACK
<b>AJ-20C</b>	AJ-1800 series, AJ-2000 series, AJ-6000 series	C
<b>AJ-20M</b>	AJ-1800 series, AJ-2000 series, AJ-6000 series	M
<b>AJ-20Y</b>	AJ-1800 series, AJ-2000 series, AJ-6000 series	Y
<b>LEXMARK CARTRIDGES</b>		
<b>17G0050</b>	Z12, Z22, Z32, Compaq IJ600	BLACK
<b>17G0060</b>		COLOR
<b>12A1970</b>	Z11, Z31, Z51, 3200, 5000, 5700, 7000, 7200	BLACK
<b>12A1980</b>		COLOR

<b>15M0120</b>	Z42,Z43,Z45, Z51, Z52, Z53, Z82, P122, X63,Z73, X83, Z125. Compaq A1000, A1500, A3000, A4000, IJ1200, IJ1400P.Samsung SF4700 Series, SCX1000 Series,1100,1150	COLOR
<b>10N0016</b>	Z13, Z23, Z25, Z33, Z35, Compaq IJ650	BLACK
<b>10N0026</b>		COLOR
<b>18L0032</b>	Z55 Series, Z56 Series, Z65, 82, 83	BLACK
<b>18L0042</b>		COLOR
<b>CANON CARTRIDGES</b>		
<b>BC-02</b>	BJ-100, BJ-200 series, BJC-200 series, BJC-1000SP	BLACK
<b>BC-05</b>	BJC-200 series, BJC-1000SP	COLOR
<b>BC-20</b>	BJC-2000 series, 4000 series, BJC-5500, S100	BLACK
<b>BX-2</b>	FAX - B320 / B340 / B310 / B320F/B360/ B400	BLACK
<b>BX-3 /BC-03</b>	FAX-B100 /B110 /B150 /B155; MultiPASS 10; BJC-210SP/ 255SP/ 265SP/ 1000SP	BLACK
<b>BCI-21BK</b>	Canon BJC-2000 series, 4000 series, 5000 series, S100, MPC-20/30/50/70/75;	BLACK
<b>BCI-21C</b>	Apple Color Style Writer2400/2500 Panafax UF-334 Panasonic KXF1600	C/M/Y
<b>BCI-3 BK</b>	Canon BJC*-3000, BJC*-6000 Series, S4500/S400/450/520/600/750,MPC-100: i550, i850, i6100	BLACK
<b>BCI-3eC</b>		CYAN
<b>BCI-3eM</b>		MAGENTA
<b>BCI-3eY</b>		YELLOW
<b>BCI-3ePB</b>		PHOTO Bk
<b>BCI-3ePC</b>		PHOTO C
<b>BCI-3ePM</b>		PHOTO M
<b>BCI-6BK</b>	Canon BJC-8000, 8200 BJJF850/ F860/ F870 Canon S800 Series, S900, S9000, i950, i9100	BLACK
<b>BCI-6C</b>		CYAN
<b>BCI-6M</b>		MAGENTA
<b>BCII-6Y</b>		YELLOW
<b>BCI-6PC</b>		PHOTO C
<b>BCI-6PM</b>		PHOTO M
<b>BCI-24BK</b>	Canon S200sp, S300 series , i320, i450, i470	BLACK
<b>BCI-24C</b>		C/M/Y
<b>BCI-10BK</b>	Canon BJ-30/35, BJC-50, BJC-55, BJC-70, BJC-80, BJC-85, BN700C.	BLACK
<b>BCI-11BK</b>	Canon BJC50,BJC-55,BJC-70,BJC-80, BJC-85. BN700C; Apple Color Style Writer2200	BLACK
<b>BCI-11C</b>		C/M/Y
<b>BCI-15BK</b>	Canon i70	BLACK
<b>BCI-15C</b>		C/M/Y
<b>BCI-61</b>	Canon BJC-7000 / 7004 / 7100, Photo 7100 / 8000 / 700J	C/M/Y
<b>BCI-62</b>		PHOTO C
<b>BJI-201BK</b>		BLACK
<b>BJI-201C</b>	Canon BJC-600 /600j/ 600s/ 600e/ 610/ 610jw/ 620/ 620jw/ 680j / 820J/ 880J;	CYAN
<b>BJI-201M</b>	Apple Color StyleWriter/Color Stylewriter Pro	MAGENTA
<b>BJI-201Y</b>		YELLOW
<b>BJI-642BK</b>	Canon BJ-300,BJ-330; P670; BrotherHC/770; IBM4072; Execjet; Bezier Bp3330/3670;	BLACK
<b>BJI-643BK</b>	Canon BJC-800, BJC-850, BJC-880; BJP-C80/CJP-C80;	BLACK
<b>BJI-643C</b>	Apple Color Inkjet / Color Printer; IBM 4079 Color Jetprinter;	CYAN
<b>BJI-643M</b>	Spec. Printing SOL. Solera spectrum	MAGENTA
<b>BJI-643Y</b>		YELLOW
<b>EPSON CARTRIDGES</b>		
<b>S020025</b>	Epson Stylus 400/800/1000; MJ-400/500/1000/1100/ 450/1010/1050.	BLACK
<b>S020034</b>	Epson MJ- 900C/910C/700V/V2C/5000C/5100C;Stylus Color;Stylus Pro/ Pro XL/Pro XL+	BLACK
<b>S020036</b>	Epson MJ- 900C/910C/700V/V2C/5000C/5100C;Stylus Color;Stylus Pro/ Pro XL/Pro XL+	C/M/Y
<b>S020047</b>	Epson Stylus Color200/II/lis;Stylus200/820, MJ-500C/510C/510CS/800C	BLACK
<b>S020049</b>	Epson Stylus Color II/IIIs/1500; Epson MJ-500C/ 800C/ 850K/1500/1500K/3000C/3000CU	C/M/Y
<b>S020093</b>	Epson Stylus Color 400/500/600;Stylus Photo700/710/ IP-100/PT-100/PM-680C / PM700C /PM-750C/PM-2000C Epson MJ-810C/830C/830CS	BLACK
<b>S020089</b>	Epson Stylus Color 400/ 600/ 800/ 850/ 1520/ Epson MJ-830C/ 830CS/ 930C/ 6000C	C/M/Y
<b>S020097</b>	Epson Stylus Color 200/500;Epson MJ-500/510C/510CS/610CS/810CS	C/M/Y
<b>S020108</b>	Epson Stylus Color 800/800N/850/1520;Epson MJ-930C/6000C	BLACK
<b>S020110</b>	Epson Stylus Photo 700/710/EX/EX2/EX3;; IP-100	5 COLOR
<b>S020118</b>	Epson Stylus Color 3000; Epson Stylus Pro 5000	BLACK
<b>S020122</b>	Epson Stylus Color 3000; Epson Stylus Pro 5000	CYAN
<b>S020126</b>	Epson Stylus Color 3000; Epson Stylus Pro 5000	MAGENTA
<b>S020130</b>	Epson Stylus Color 3000; Epson Stylus Pro 5000	YELLOW
<b>S020138</b>	Epson Stylus Color 300	C/M/Y BK
<b>S020187</b>	Epson Stylus Color 440/ 460/ 640/ 660/ 670; Photo 720/ 750/ 1200	BLACK
<b>S020189</b>	Epson Stylus Color 740/760/840/1160; Scan 2000/2500	BLACK
<b>S020191</b>	Epson Stylus Color 440 / 460 / 640 / 660 / 670/ 740 / 760/ 860/ 1160, Scan 2000/2500	C/M/Y
<b>S020193</b>	Epson Stylus Photo 720/750 Epson PM-770C	5 COLOR
<b>T001</b>	Epson Stylus Photo 1200 Epson Stylus PM-3000C	5 COLOR

<b>T003</b>	Epson Stylus Color 900/900N/900G/980/980N	BLACK
<b>T005</b>	Epson Stylus Color 900/900N/900G/980/980N	C/M/Y
<b>T007</b>	Epson Stylus Photo 780; 790; 870; 875; 875DC; 890; 895;1270; 1280; 1290;	BLACK
<b>T008</b>	Epson Stylus Photo 780; 785EPX; 870; 875DC/ 790/ 890	5 COLOR
<b>T009</b>	Epson Stylus Photo 1270;1280;1290	5 COLOR
<b>T013</b>	Epson Stylus Color 480/580, Epson Stylus C20SX/C40UX	BLACK
<b>T014</b>	Epson Stylus Color 480/ 580, Epson Stylus C20UX/ C40UX	C/M/Y
<b>T015</b>	Epson Stylus Photo 2000P	BLACK
<b>T016</b>	Epson Stylus Photo 2000P	5 COLOR
<b>T017</b>	Epson Stylus Color 680; 777; 685	BLACK
<b>T018</b>	Epson Stylus Color 680; 777; 685	C/M/Y
<b>T019</b>	Epson Stylus Color 880/880i/83	BLACK
<b>T020</b>	Epson Stylus Color 880/880i/83	C/M/Y
<b>T026</b>	Epson Stylus Photo 810 / 820 / 830	BLACK
<b>T027</b>	Epson Stylus Photo 810 / 820 / 830	5 COLOR
<b>T028</b>	Epson Stylus Color C60/C61	BLACK
<b>T029</b>	Epson Stylus Color C60/C61	C/M/Y
<b>T0321BK</b>	Epson Stylus C80/C70 also C82	BLACK
<b>T0322C</b>	Epson Stylus C80/C70	CYAN
<b>T0323M</b>	Epson Stylus C80/C70	MAGENTA
<b>T0324Y</b>	Epson Stylus C80/C70	YELLOW
<b>T0341B</b>	Epson Photo 2100	BLACK
<b>T0342C</b>	Epson Photo 2100	CYAN
<b>T0343M</b>	Epson Photo 2100	MAGENTA
<b>T0344Y</b>	Epson Photo 2100	YELLOW
<b>T0345PB</b>	Epson Photo 2100	PB
<b>T0346PC</b>	Epson Photo 2100	PC
<b>T0347PM</b>	Epson Photo 2100	PM
<b>T0348MBK</b>	Epson Photo 2100	MBK
<b>T0422C</b>	Epson stylus C82	CYAN
<b>T0423M</b>	Epson stylus C82	MAGENTA
<b>T0424Y</b>	Epson stylus C82	YELLOW
<b>T036</b>	Epson stylus	BLACK
<b>T037</b>	Epson stylus	COLOR
<b>T038</b>	Epson Stylus C41SX, C41UX ,C43UX	MAGENTA
<b>T039</b>	Epson Stylus C41SX, C41UX ,C43UX	YELLOW
<b>T040</b>	Epson stylus C62	BLACK
<b>T041</b>	Epson stylus C62	C/M/Y
<b>T0461</b>	Epson stylus C63 / C83 / CX6300	BLACK
<b>T0472</b>	Epson stylus C63 / C83 / CX6300	COLOR
<b>T0473</b>	Epson stylus C63 / C83 / CX6300	MAGENTA
<b>T0474</b>	Epson stylus C63 / C83 / CX6300	YELLOW





